


Gerber Guardian Sheath adjustments,
adjustable tension on knife retention
how to reverse clip for tip up or tip down carry.

Operating instructions for the Guardian Back-Up Sheath System:


The Guardian Back-Up knife and sheath is equipped with several safety features and when used properly can be an extremely versatile knife. To make the knife easy to remove, slide the adjustment buttons on the side of the sheath toward the closed end of the sheath (See Figure A). This adjustment can only be done when the knife is not in the sheath. Conversely, the tension required to remove the knife will be increased if the buttons are moved toward the open end of the sheath. This setting should be used during strenuous activity to prevent loss of the knife.

Figure A

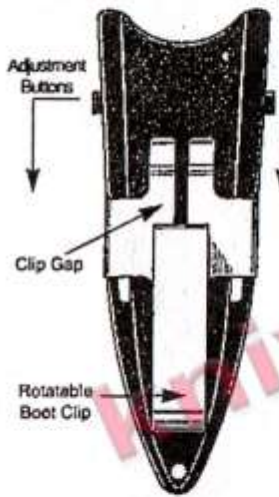

of the actual clip. This hooked end prevents the clip from slipping off of a boot or belt by catching on a seam or edge.

Figure B

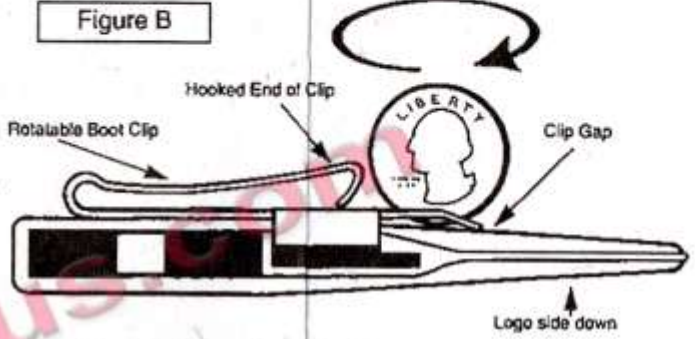

knivesplus.com